
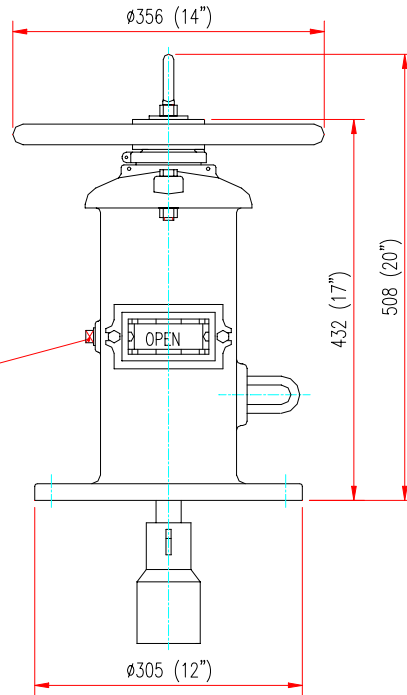


Fig. No.: REL-PI-WALL

WALL INDICATOR POST

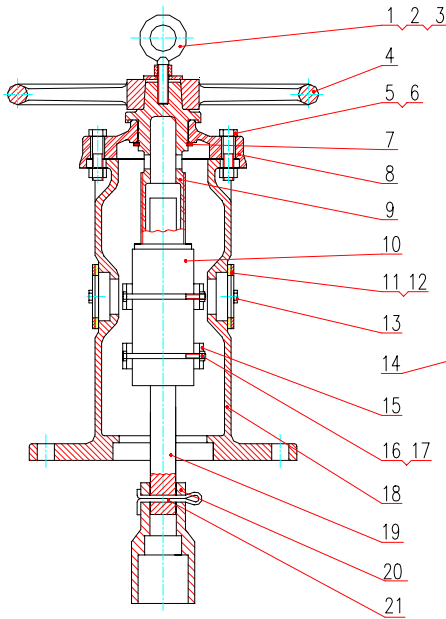

Materials List

No.	Component	Material	No.	Component	Material
1	Eye Bolt	Carbon Steel ASTM A307B	11	Window Glass	Plexiglass
2	Hex Nut	Carbon Steel ASTM A307B	12	Gasket	PTFE
3	Washer	Carbon Steel ASTM A570 Gr. 33	13	Hex Nut	Carbon Steel ASTM A307B
4	Handwheel	Ductile Iron ASTMA536 Gr. 65-45-12	14	Plug	Malleable Iron
5	Hex Cap Screw	Carbon Steel ASTM A307B	15	Target	Cast Aluminium
6	Square Nut	Carbon Steel ASTM A307B	16	Hex Cap Screw	Carbon Steel ASTM A307B
7	Snap Ring	Stainless Steel AISI 1066	17	Hex Nut	Carbon Steel ASTM A307B
8	Cover	Cast Iron ASTM A126 Class B	18	Body	Cast Iron ASTM A126 Class B
9	Operating Nut	Bronze ASTM B62 C83600	19	Stem	Carbon Steel AISI 1045
		Stainless Steel AISI 304	20	Crane Coupling	Ductile Iron ASTMA536 Gr. 65-45-12
10	Target Carrier Nut	Bronze ASTM B62 C83600	21	Cotter Pin	Stainless Steel AISI 304
		Stainless Steel AISI 304			

FIELD ADJUSTMENT

1. Remove the Top Section from the top of the Indicator Post assembly.
2. Set the "OPEN" and "SHUT" targets for the appropriate valve size.
3. Reattach the Top Section to the top of the Indicator Post assembly.