



Material List

| No. | Component | Material |
|-----|---------------------------------------|------------|
| 1 | Lifting eyebolt | ASTM A105 |
| 2 | Hex nut | ASTM A105 |
| 3 | Washer | ASTM A105 |
| 4 | Hand wheel | ASTM A536 |
| 5 | Operating nut | ASTM B62 |
| 6 | Hex cap screw | ASTM A105 |
| 7 | Hex nut | ASTM A105 |
| 8 | Snap ring | AISI 066 |
| 9 | Target carrier nut | ASTM B62 |
| 10 | Target | ASTM B108 |
| 11 | Hex cap screw | ASTM A105 |
| 12 | Window glass | LEXAN-UN |
| 13 | Window glass gasket | PTFE |
| 14 | Hex cap screw | ASTM A105 |
| 15 | Hex nut | ASTM A105 |
| 16 | Body | ASTM A536 |
| 17 | Stand pipe | ASTM A53 |
| 18 | Stem | AISI 1045 |
| 19 | Cotter pin | AISI 304 |
| 20 | Crane coupling | ASTM A126B |
| 21 | Plug | AISI 304 |
| 22 | Cover | ASTM A126B |
| 23 | Cross recessed countersunk head screw | AISI 304 |
| 24 | Locking nose | ASTM 307 B |

Ordering Information

| Description | Part Number |
|-----------------------------|-------------|
| Wall Post Indicator (Rasco) | 7V00000071 |

- Optional Extra: **PIBV2** Switch

Field Adjustment:

1. Remove the top section from the top of the Indicator post assembly.
2. Set the "OPEN" and "SHUT" targets for the appropriate valve size.
3. Reattach the top section to the top of the indicator post assembly.
4. Design and dimensions are subject to change without notice.

